


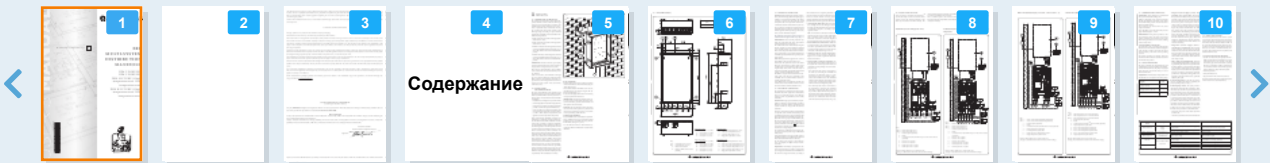

Immergas DIM 2 ZONE ERP Instructions And Warnings

Мультисистемный распределительный коллектор Erp



Быстрый переход

Загрузите это руководство	x
Описание устройства	5
Электрическое подключение	7
Схема подключения DIM 2 Zone Erp	16



Инструкции и предупреждения

ERP МУЛЬТИСИСТЕМНЫЙ РАСПРОСТРАНЕНИЕ КОЛЛЕКТОР

- DIM 2 ZONE ERP
- DIM 3 ZONE ERP
- DIM H-LT ERP (1 high-температурная зона 1 низкая-температурная зона)
- DIM H-2LT ERP (1 high-температурная зона 2 низкая-температурные зоны)



Table of Contents

[< Previous Page](#)[1](#) [2](#) [3](#) [4](#) [5](#)[Next Page >](#)

Related Manuals for Immergas DIM 2 ZONE ERP

[Gas Heater Immergas DIM 2 ZONE ErP Instructions And Warnings](#)

Erp multi-system distribution manifold, 1 high-temperature area 1/2 low-temperature zones (32 pages)

Summary of Contents for Immergas DIM 2 ZONE ERP

[Page 1](#)

Instructions and warnings MULTI-SYSTEM DISTRIBUTION MANIFOLD DIM 2 ZONE ERP DIM 3 ZONE ERP DIM H-LT ERP (1 high- temperature area 1 low- temperature zone) DIM H-2LT ERP (1 high- temperature area 2 low- temperature zones)

[Page 3](#)

Dear Customer, Our compliments for having chosen a top-quality Immergas product, able to assure well-being and safety for a long period of time. As an Immergas customer, you can also count on a qualified After-Sales Service, prepared and updated to guarantee the constant efficiency of your products. Read the following pages carefully: you will be able to draw useful suggestions regarding the correct use of the appliance.

[Page 4: Table Of Contents](#)

Checks and maintenance15 Installing the device5 Use and maintenance instructions ..14 3.1 Wiring diagram DIM 2 zone ErP....16 1.1 Description of the device.....5 2.1 General warnings.....14 3.2 Wiring diagram DIM 3 zone ErP....17 1.2 Installation recommendations.

[Page 5: Installing The Device](#)

THE DEVICE 1.1 DESCRIPTION OF THE DEVICE. The "DIM" code (Disgiuntore Idrico Multi-im- pianti) identifies a series of kits that Immergas proposes for the management of mixed zone central heating systems with large water capacities. In particular, there are kits that can only

This manual is also suitable for:

[Dim 3 zone erp](#)[Dim h-lt erp](#)[Dim h-2lt erp](#)[Dim a-bt](#)[Dim 1 zone h-2lt](#)